

Quick Printer Calibration

Install label media and a ribbon in the printer.

Kroy K4350

- **Switch printer power off**
- **Hold down the PAUSE button**
- **Switch printer power on**
- **Release PAUSE button when the printer starts to feed out some labels**

Kroy K4452NB / K4453NB

- **Switch printer power off**
- **Hold down the PAUSE/FEED button**
- **Switch printer power on**
- **Release PAUSE button when the printer starts to feed out some labels**

Kroy K4652/53NB / K4700 Series / K8300

- **Switch printer power off**
- **Hold down the PAUSE button**
- **Switch printer power on**
- **Release PAUSE button when the printer starts to feed out some labels**